



Notes:

place

- 1. Before installation, please check that the parts are complete and that the luminaire is in good condition.
- Disconnect the power supply before installation and carry out wiring.
 When installing the light bulb, use a light bulb with a wattage lower than that shown as the light head label.

Steel

wire

4. Installation and maintenance must be carried out by a professional technician.