



1. Use a drill bit to estimate two holes in the ceiling. Align the holes with the pegboard holes, and then hammer them into the wall with expansion screws.



2. Use screws to fix the pegboard in the kit.

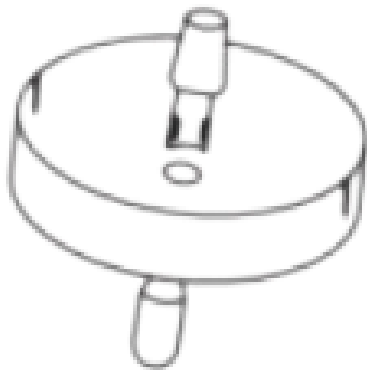

3. Adjust the length of the wire until the appropriate length. (if the lamp wire is long can be properly cut off) Then connect the fire wire zero wire to the fixture's fire wire zero wire.

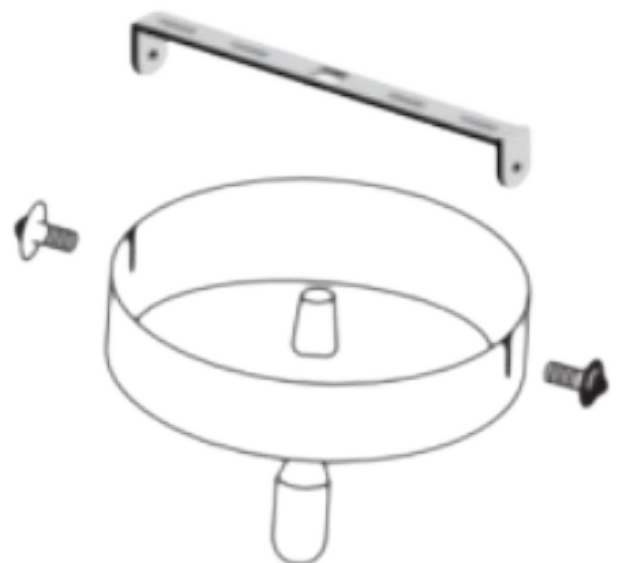

4. Use the small screws in the kit in the side of the seat plate to fix the chassis and hanging plate.